

This exploded view diagram illustrates the assembly of the Makita DXT1 cordless drill driver. The components are numbered 1 through 35. The diagram shows the following parts and their assembly sequence:

- Motor Housing and Gear Train (Top):** Components 1 through 11 include the motor housing, gears, and internal shafts. Part 12 is the output gear, and 13 is the output shaft.
- Trigger Switch and Trigger Housing (Middle):** Components 14 through 21 show the trigger switch mechanism, including the trigger housing (14), trigger switch (15), and trigger button (16).
- Internal Gear Train (Bottom Left):** Components 22 through 26 show the internal gear train, including the input gear (22), output gear (23), and intermediate gears (24, 25, 26).
- Trigger Switch Housing (Bottom Right):** Components 27 through 32 show the trigger switch housing, including the trigger switch housing (27), trigger switch (28), trigger button (29), and trigger switch housing (30).
- Battery Pack and Base (Bottom):** Components 33 through 35 show the battery pack (33), battery pack housing (34), and the base of the drill driver (35).

The diagram is a technical line drawing showing the exploded view of the Makita DXT1 cordless drill driver. The components are numbered 1 through 35. The diagram shows the following parts and their assembly sequence:

- Motor Housing and Gear Train (Top):** Components 1 through 11 include the motor housing, gears, and internal shafts. Part 12 is the output gear, and 13 is the output shaft.
- Trigger Switch and Trigger Housing (Middle):** Components 14 through 21 show the trigger switch mechanism, including the trigger housing (14), trigger switch (15), and trigger button (16).
- Internal Gear Train (Bottom Left):** Components 22 through 26 show the internal gear train, including the input gear (22), output gear (23), and intermediate gears (24, 25, 26).
- Trigger Switch Housing (Bottom Right):** Components 27 through 32 show the trigger switch housing, including the trigger switch housing (27), trigger switch (28), trigger button (29), and trigger switch housing (30).
- Battery Pack and Base (Bottom):** Components 33 through 35 show the battery pack (33), battery pack housing (34), and the base of the drill driver (35).

Model No.DML816 CORDLESS FLASHLIGHT

Item No.	Parts No.	Description	Interchangability	Q'ty	New/Old	Note1	Note2
001	GM00001269	SCREW 3X12PB(B0130120202)		4			
002	GM00002324	REAR CASE		1			
003	GM00001267	SCREW 2.6X8PWB(B0126080006)		2			
004	GM00002349	LED ASSY		1			
005	GM00002322	LENS		1			
006	GM00002321	FRONT CASE		1			
007	GM00002325	LEFT ROTATOR		1			
008	GM00001270	SPRING (B1214801020)		1			
009	GM00001279	SPRING LID (C1020801001)		1			
010	GM00002326	LEFT ROTATOR BRACKET		1			
011	GM00001282	FIX PLATE (C3020801001)		1			
012	GM00002327	RIGHT ROTATOR BRACKET		1			
013	GM00001279	SPRING LID (C1020801001)		1			
014	GM00001270	SPRING (B1214801020)		1			
015	GM00002328	RIGHT ROTATOR		1			
016	GM00001268	SCREW 2.6X10KA(B0126100121)		3			
017	GM00001268	SCREW 2.6X10KA(B0126100121)		3			
018	GM00001269	SCREW 3X12PB(B0130120202)		2			
019	GM00001269	SCREW 3X12PB(B0130120202)		8			
020	GM00002336	HOUSING ASSY		1			
D10		INC. 30					
021	GM00002331	HANGING HOOK ASSY		1			
022	GM00002330	HOOK COVER ASSY		1			
D10		INC. 23-26					
023	GM00002339	LOCKING SHAFT		1			
024	GM00002340	SPRING		1			
025	GM00002341	COVER		1			
026	GM00001322	SCREW 2.6X8 PB		1			
027	GM00001322	SCREW 2.6X8 PB		3			
028	GM00001322	SCREW 2.6X8 PB		2			
029	GM00002332	HOOK SUPPORT		1			
030	GM00002336	HOUSING ASSY		1			
D10		INC. 20					
031	GM00002249	SWITCH SPRING		1			
032	GM00002333	SWITCH ASSY		1			
033	GM00002337	MAIN PCBA ASSY		1			
034	GM00002231	STRAP HOOK		1			
035	GM00002338	TERMINAL ASSY		1			
A01	GM00001288	SHOULDER HOOK SET G0180100100		1			
A02	GM00001326	LAMP SHADE		1			

Please state Parts No. when your order.

Print Date 15.11.2023